


# AD Enclosure - C

Search and Secure Procedure

C

EncCDE.V1.0

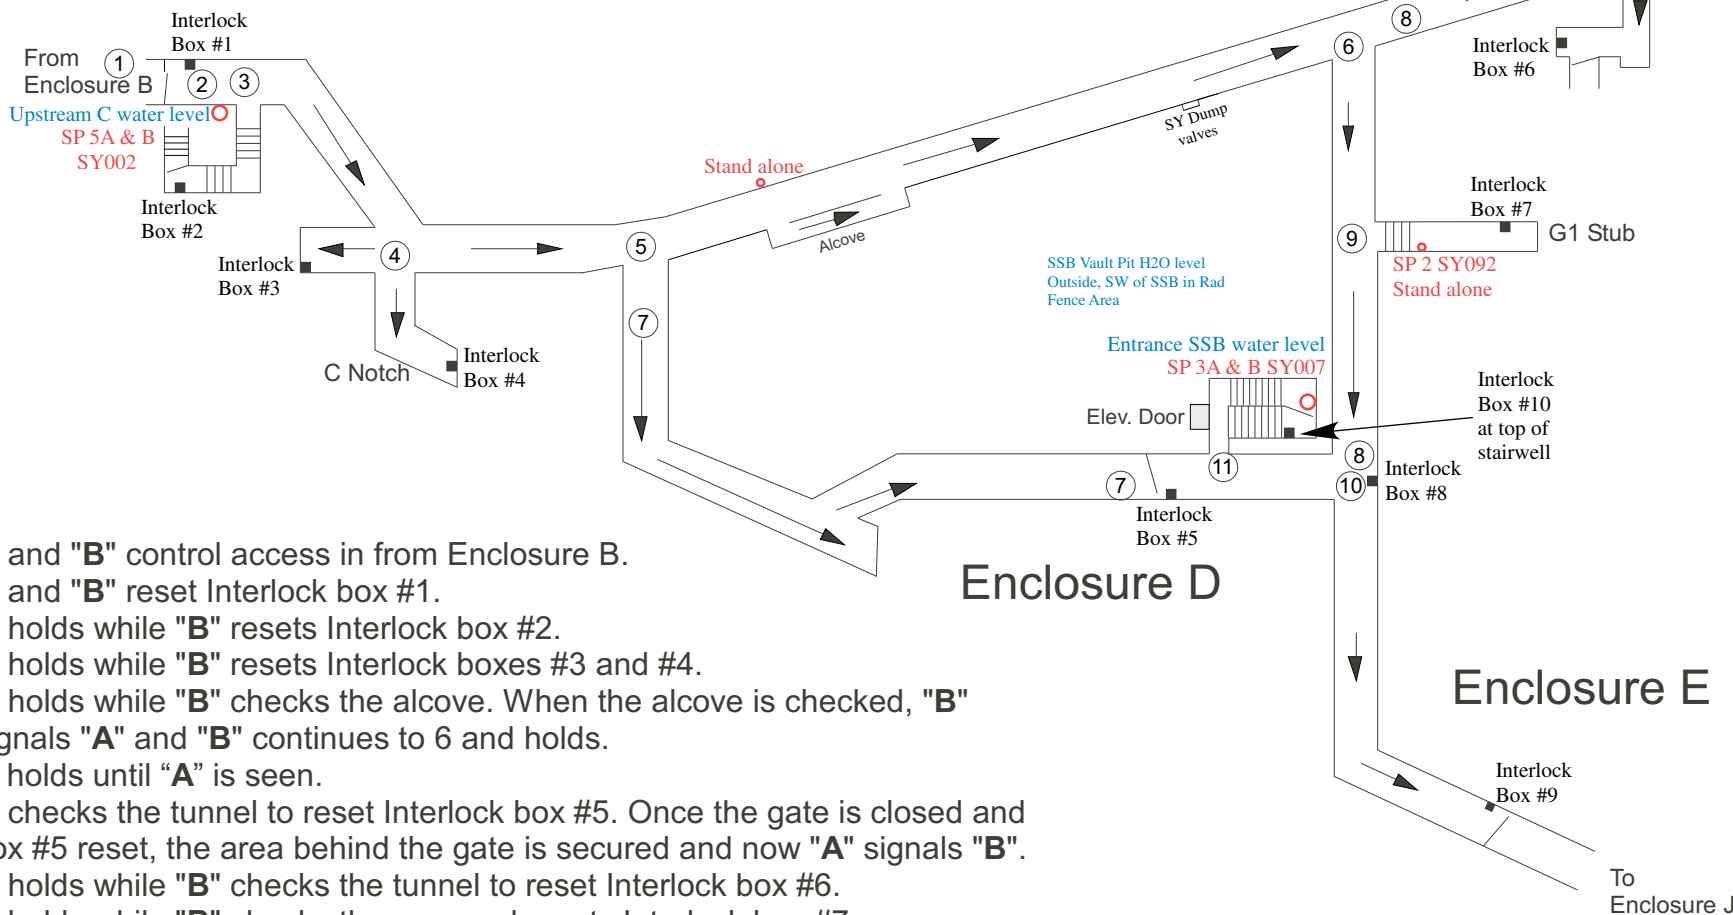

1. "A" and "B" control access in from Enclosure B.
2. "A" and "B" reset Interlock box #1.
3. "A" holds while "B" resets Interlock box #2.
4. "A" holds while "B" resets Interlock boxes #3 and #4.
5. "A" holds while "B" checks the alcove. When the alcove is checked, "B" signals "A" and "B" continues to 6 and holds.
6. "B" holds until "A" is seen.
7. "A" checks the tunnel to reset Interlock box #5. Once the gate is closed and box #5 reset, the area behind the gate is secured and now "A" signals "B".
8. "A" holds while "B" checks the tunnel to reset Interlock box #6.
9. "A" holds while "B" checks the spur and resets Interlock box #7.
10. "A" and "B" check the air vent and reset Interlock box #8. "A" holds while "B" checks the tunnel and stairway to reset Interlock boxes #9.
11. "B" joins "A" and they check the tunnel and stairway to Interlock box #10.

Reviewed AD/RSO	Date
<i>Michael A. Gerardi</i>	4-1-09
Approved AD/OPS Dept. Head	Date
<i>[Signature]</i>	4-2-09

CONTROLLED DOCUMENT

Users are responsible for ensuring they work to the latest approved revision. Printed or electronically transmitted copies are uncontrolled.